


**ENGINE WIRING****F4R736**

**120**  
**INJECTION COMPUTER**  
**SCTFDR CTFDR**

N°	mm²		...
8	0.6	3BB	CANISTER BLEED SOLENOID VALVE
9	0.35	3AC	FUEL PUMP RELAY COIL - CONTROL
10	0.35	3AA	INJECTION LOCKING RELAY COIL - CONTROL
11	0.35	3JN	FAN 1 RELAY - CONTROL
12	0.5	3S	PINKING SENSOR 1 + SIGNAL > FRONT
13	0.6	3MQ	MOTORISED THROTTLE POTENTIOMETER 2 SIGNAL
14	0.35	3LS	LOAD POTENTIOMETER 1 + SIGNAL
15	0.6	3GN	MANIFOLD PRESSURE SENSOR EARTH
16	0.6	3F	ATMOSPHERIC PRESSURE SENSOR SIGNAL
17	0.6	3MP	MOTORISED THROTTLE POTENTIOMETER 1 SIGNAL
18	0.6	3B	AIR TEMPERATURE SENSOR + SIGNAL
20	1.0	38Z	AIR CONDITIONING CIRCULATION CONTROL > PETROL-DIESEL COMPUTER
23	0.35	3FX	CRUISE CONTROL ON>OFF - CONTROL
24	0.6	3BL	ENGINE SPEED > TDC SENSOR - SIGNAL
27	0.35	133B	INSTRUMENT PANEL CAN H SIGNAL > COMPUTER
28	1.4	M	EARTH
29	0.35	AP29	PROTECTED + AFTER IGNITION ENGINE FUNCTION FUSE
30	0.6	BP37	PROTECTED + BATTERY FEED > INJECTOR MEMORY > LOCKING
32	1.0	3CV	INJECTOR 1 & 4 IGNITION COIL - CONTROL
33	1.4	M	EARTH
37	1.0	3PC	CAMSHAFT SHIFTER CONTROL
39	0.35	38K	AIR CONDITIONING CUT-OFF CONTROL > PETROL-DIESEL COMPUTER
43	0.35	3LW	LOAD POTENTIOMETER 2 + SIGNAL
44	0.6	3GL	DOWNSTREAM OXYGEN SENSOR SIGNAL
45	0.6	3GK	UPSTREAM OXYGEN SENSOR SIGNAL
46	0.6	3C	COOLANT TEMPERATURE SENSOR + SIGNAL
47	0.6	38X	REFRIGERANT GAS PRESSURE SENSOR SIGNAL
48	0.35	86D	DECLUTCH + SIGNAL
49	0.35	3PD	SPEED LIMITER ON/OFF CONTROL
51	0.6	55S	ENGINE SPEED SIGNAL
52	0.35	5A	BRAKE PEDAL SWITCH + SIGNAL
53	0.35	65A	BRAKE LIGHTS + CONTROL
54	0.6	3BG	ENGINE SPEED SIGNAL > TDC SENSOR
56	0.35	HK7	DIAGNOSTIC SIGNAL K 2000

57	0.35	133C	INSTRUMENT PANEL CAN L SIGNAL > COMPUTER
58	0.35	86G	CRUISE CONTROL PROGRAMMING CONTROL
59	0.6	3CR	INJECTOR 1 - CONTROL
60	0.6	3CT	INJECTOR 3 - CONTROL
61	1.0	3AJB	THROTTLE MOTOR + CONTROL
62	1.0	3AJC	THROTTLE MOTOR - CONTROL
63	0.6	3VD	DUAL MODE SOLENOID VALVE CONTROL
64	0.35	3TY	ENGINE OVERSPEED SIGNAL
65	1.0	3GF	UPSTREAM OXYGEN SENSOR HEATER - CONTROL
66	1.4	3FB	INJECTION + > PROTECTIVE RELAY
67	1.4	M	EARTH
68	1.0	3GG	DOWNSTREAM OXYGEN SENSOR HEATER - CONTROL
69	0.35	3JP	FAN 2 RELAY - CONTROL
71	0.35	3LU	+ LOAD POTENTIOMETER 2
72	0.5	3DQ	PINKING SENSOR -
73	0.6	3JK	COOLANT TEMPERATURE -
75	0.35	3LT	- LOAD POTENTIOMETER 1
76	0.6	3GJ	DOWNSTREAM OXYGEN SENSOR EARTH
77	0.35	86M	CRUISE CONTROL PROGRAMMING RETURN SIGNAL
78	0.6	3LG	ATMOSPHERIC PRESSURE SENSOR +
79	0.6	38U	RHEOSTAT CURSOR
80	0.6	3GH	UPSTREAM OXYGEN SENSOR EARTH
82	0.6	3MO	MOTORISED THROTTLE POTENTIOMETER SENSOR -
83	0.6	38Y	REFRIGERANT GAS PRESSURE SENSOR +
84	0.6	3JQ	AIR TEMPERATURE -
85	0.6	3AW	POWER STEERING PRESSOSTAT + SIGNAL > INJECTION COMPUTER
87	0.35	3LV	- LOAD POTENTIOMETER 2
89	0.6	3CU	INJECTOR 4 - CONTROL
90	0.6	3CS	INJECTOR 2 - CONTROL
1	1.0	3CW	INJECTOR 2 & 3 IGNITION COIL - CONTROL
3	1.4	M	EARTH
6	0.35	3LR	+ LOAD POTENTIOMETER 1
7	0.6	3MN	MOTORISED THROTTLE POTENTIOMETER + 5 VOLTS