


## ***Clio II 182 - water in Driver foot well only when driven in the rain.***

Clean inner arch with hose/brush then move car to dry ground. Take reference picture of how it looks. Turn wheel fully to the right to make access easy. No need to jack it up or remove wheel.

1, Undo the screw (self tapper) & remove the two large round clips ideally with correct tool.



Tools as above & suggest you get 2x plastic clips in case they break

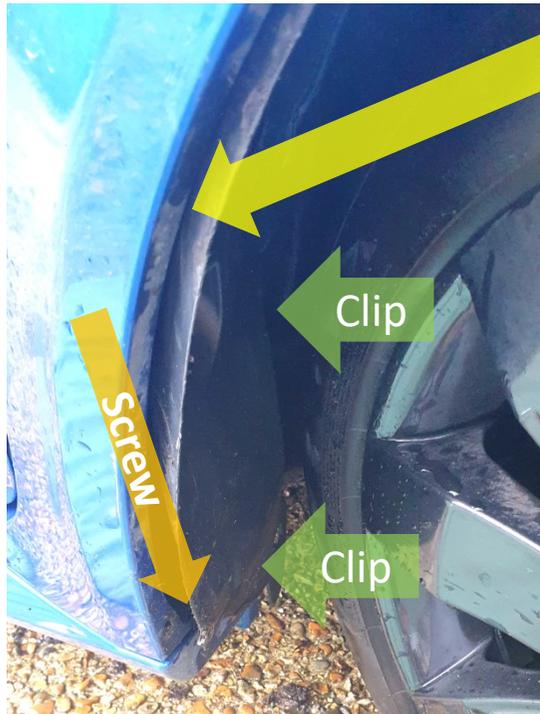

2, Pull the black plastic liner away from the wing until about level with top of wheel – no need to fully remove liner. Pull foam insert down and out.

3, This reveals muck/blockage. Clean it out and flush it clear with the water.



4, Slide foam insert back in – surprisingly easy. Push plastic liner back inside wing so that screw and clip holes align. Fit screw and do up tight. Ensure clip holes align, undo screw 2 turns, push clips in fully. Tighten screw fully and check clips are tight. All Done. Best done on a warm day when the plastic bends more easily.